



sound sleeper

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatuses (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use **sound sleeper** only for its intended purpose.
- Never reach for a product that has dropped into water. Unplug it first.
- Do not use this product in the bathtub or shower.
- This unit is not a toy. Do not allow children to play with it.
- Arrange power cord to minimize the possibility of accidents such as tripping.
- Do not use the power cord as a handle. Never pull on the power cord.
- Do not use the sound sleeper if any signs of deterioration appear on the unit or on the power cord.
- Never attempt to repair the unit yourself, as it will likely damage the unit. If within the warranty period, simply return the unit with proof of purchase, and we will gladly repair it or replace it.
- This power unit is intended to be correctly oriented in a vertical or floor mount position.
- For connection to a supply not in the USA, use an attachment plug adaptor of the proper configuration for the power outlet.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personal. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

10 SOOTHING SOUNDS TO CHOOSE FROM

~ 34 natural sound combinations ~



PRIMARY SOUNDS - Summer Night, Rain, Brook, Ocean, Wind, and Womb.
BACKGROUND SOUNDS - Seagull, Bird, Buoy, and Thunder.

BEFORE FIRST USE: Turn the **sound sleeper** face down. Please slide the small black switch from DEMO MODE to NORMAL MODE. The demo mode automatically turns off the unit in 10 seconds and is intended for display and shipping purposes only.

OPERATING INSTRUCTIONS

1. The **sound sleeper** can be used both at home and for travel.
 - a. **HOUSEHOLD USE** - Plug the power cord into the unit and then plug in the AC adapter into a 110V wall outlet. **Do not** plug into a 220V AC outlet.
 - b. **TRAVEL** - Insert 4 new AA batteries.
2. **ON / OFF / TIMER BUTTON** - Slide button to 1 of 3 positions:
 - a. **ON** - Plays your favorite sounds continuously.
 - b. **OFF** - Stops playing sounds.
 - c. **TIMER** - Plays your favorite sounds and automatically turns off in 60 minutes – ideal when using batteries.
3. Choose 1 of the 3 different modes available. Depress the mode button and you will see the light activate under each associated mode.
 - a. **SINGLE MODE** - Select single mode, then depress any one of the 10 sounds. The sound will play continuously.
 - b. **COMBINE MODE** - Select combine mode, then depress 1 of 6 primary sounds (dark buttons). Next depress 1 of 4 background sounds (light gray buttons). You will hear the primary sound continuously with the background sound appearing every 10-15 seconds.
 - c. **RANDOM MODE** - Select random mode, then depress 1 of 6 primary sounds. You will hear the primary sound continuously with the 4 background sounds randomly appearing every 10-15 seconds. This more closely resembles the randomness of nature's real sounds.
4. **HEADPHONES** - The **sound sleeper** may also be used with headphones for a private listening experience. Simply plug in a pair of compatible headphones and enjoy. Be sure you are near a pillow as you will likely fall fast asleep!

CLEANING INSTRUCTIONS

- To reduce the risk of shock, always unplug the unit before cleaning.
- Wipe off with a slightly damp washcloth or sponge. Do not use any cleaning liquids on it.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.